

## EDIG-2

- These products are Front Panel mounted and can be used to display the sensed parameter by receiving a 0-10vdc input from Pressure, Temperature, Humidity, Flow, Level transmitters and damper/valve motors. The display and transmitter range must be matched. Otherwise use the 0 -10 or 0-100 display range. The display will be linear across the input range.



EDIG-2

Accuracy approx 1% of range.

Suitable for use with EDT., EWT., EWPT., EAV., EHDT., EHRT., ED-V040 EI-V110 E08..M E16..M etc.

The ranges are selected via a 16 position switch.

Input current &lt; 0.5mA

Enclosure Flammability = UL94-V2

Type	Selectable Display	Selectable Range	Supply	Input	Power Consumption	Mounting	Enclosure
EDIG-2	C %RH m/s mbar Bar kPa Pa etc	See chart	24VAC/DC	0-10VDC	<3.3VA	Front Panel	IP00


## RANGE CHART:

Switch Position	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Display Range	0-1	0-2	0-3	0-5	0-10	0-16	0-25	0-50	0-100	0-200	0-500	0-999	-10/+40	-10/+110	-10/+50	25/95

**Example:** If the range required is 0-100 mbar, then set the switch position to 8.  
 At 0vdc input, the display is zero and linear up to 10vdc, when the display will be 100 mbar


THIS PRODUCT CAN ALSO BE USED AS A POSITION INDICATOR FOR 0-10VDC DAMPER / VALVE MOTORS.

## DIMENSIONS:

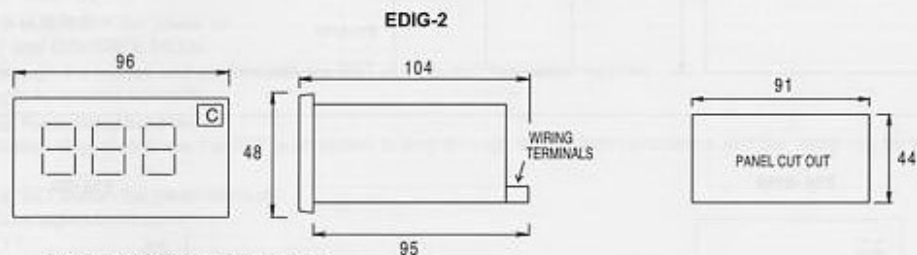

Fixing brackets &amp; screws are provided.

A set of labels are included with the following symbols and can be applied to the unit as shown above -



## WIRING:

## EDIG-2



Rotary switch to select the range required.

## INSTALLATION:

Terminals 0.5-2.5mm

Sensor / control signal cable size 7/0.2mm

Max length 100m

Screened cable is recommended

The screen should be earthed at controller end only

Keep sensor/control signal wires away from power cables/units which may cause interference.